

UNIQUE VENDING CARTS

Ice Cream / Popsicle Cart - WCS

INSTRUCTIONS FOR ASSEMBLY AND USE
Tools: one 13mm wrench and a 10mm Phillips Screwdriver


01

With a screwdriver or a coin, press the latch down and open the front cover.




02

Open rear latches of the cover, and remove it, placing it down carefully. Repeat when reloading.

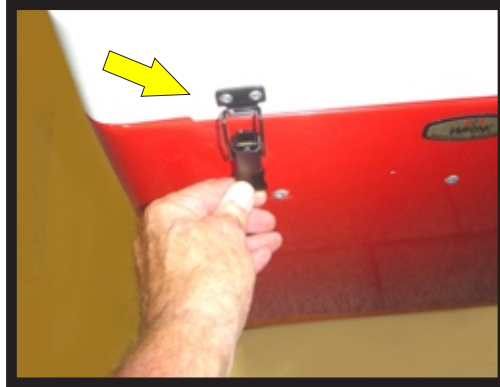

03

Assembly Kit
1- 02 wheels with two bearings each.
2- 02 hubcaps.
3- 02 cotter pins.
4- 02 rings.
5- 01 handlebar.
6- 02 knobs.
7- 01 stand.
8- 01 display stand
9- 01 trash bin.

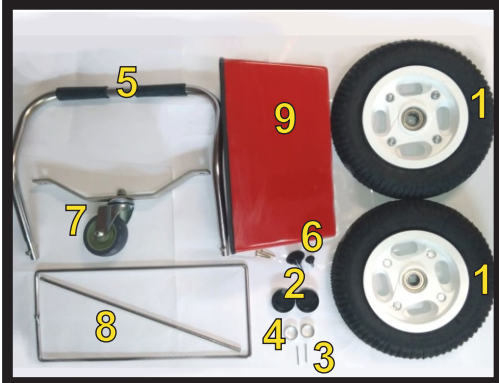

04

Place protection on floor and tilt cart backwards until it stands upright on handlebar base.



05

Position the stand as pictured, coinciding with screw openings on opposite sides. Place one screw and tighten manually.




06

Place the second screw, tighten it by hand. Finish by tightening them firmly with 13mm wrench.



07

Put the wheel as explained in the sheet "instructions for wheels assembly".

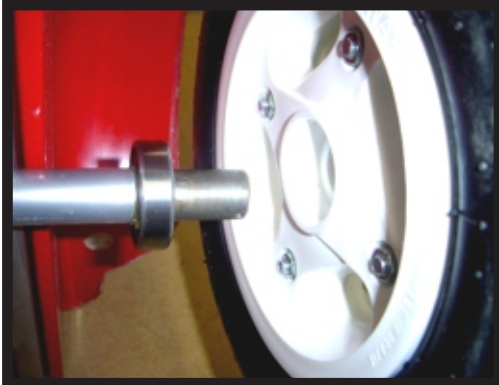

08

Return the cart to a horizontal position and using the Phillips screwdriver and screws from kit, attach the trash bin onto the plastic sleeves.



09

Gently tighten the screws of the trash bin to avoid stripping the plastic sleeves.



10

Place bases for the display and the umbrella noting that the smallest goes on the left side.



Ice Cream / Popsicle Cart - WCS


11

Place the knob for the umbrella on the right side and leave it tightened if not in use.



12

First insert the display rod (1) and tighten the knob. Then place the display (2) and twist clockwise until tight.

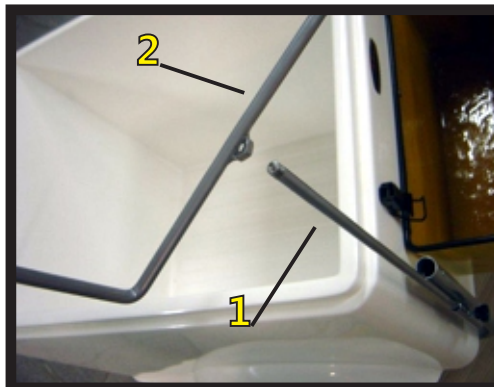

13

Insert handlebar into bases as shown. Find screw openings and insert screws from the kit.




14

Place the nuts on opposite end of screw and using a 10mm wrench, tighten firmly so the handlebar is not loose.



15

Place the large cold plates first, keeping the lateral protrusions (1) visible and caps facing up.

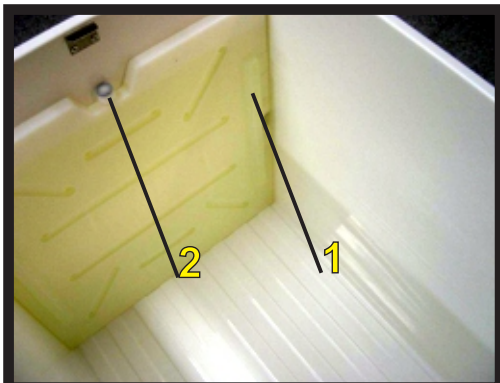

16

Place side cold plates noting that the beveled sides should be inserted over the protrusions of the large plates.



17

Once smaller side plates are positioned, fit the frame as shown over the lateral plates to maintain them in place.



18

Load cart with desired product and close immediately following steps 01 and 02.



Maintenance tips:

- Use automotive shampoo to clean the fiberglass.
- In addition, use automotive wax to protect fiberglass and polish with a flannel cloth.

TECHNICAL DATA

Width	700 mm / 27.5in
Height (without handle)	790 mm / 31.1in
Length	910 mm / 35.8in
Total net weight	65.0 kg / 143lbs
Maximum payload.....	60.0 kg / 132lbs
Eutectic (cold) plates	6 pc

Images used for illustration purposes only
THE MANUFACTURER RESERVES THE RIGHT TO CHANGE
THIS PRODUCT AT ANY TIME WITHOUT NOTICE.

UNIQUE VENDING CARTS

Wheels & casters

INSTRUCTIONS FOR ASSEMBLY AND USE

Tools Needed: 01 13mm wrench, pliers 01.

01

Lift the front of the cart to start assembling the wheels. Use a shim to keep it in place. Loosen nuts and put in place the caster wheel



02

Tighten the nuts with a 13mm and put the cart back on the floor.



03

At the start of each rear wheel assembly finds:

- 1-02 bearings
- 2-01 Cap
- 3-01 counter-pin
- 4-01 ring




04

Manually slide the first bearing to the end.



05

Slide wheel all the way in, with nuts facing inward.

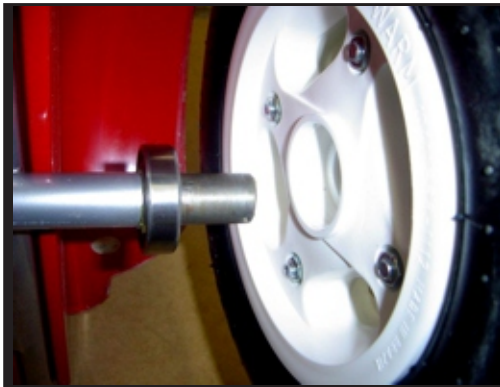

06

With the wheel fitted, slide the second bearing and then ring back.



07

Place the counter-pin and a pair of pliers, bend one end to the side (about axis) catching it.



08

With the wheel properly mounted and counter-locking pin to put the finishing cap.




UNIQUE VENDING CARTS

EUTECTIC (COLD) PLATES)

INSTRUCTIONS FOR ASSEMBLY, USE AND MAINTENANCE

01

Note that the small plates have one beveled side.

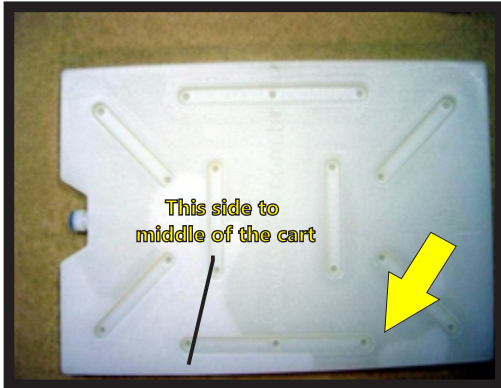

02

The straight parts of each small plate should be placed towards the middle of the cart.



03

Always place large plates in first.



04

Follow by small plates.



#1 Large plate (2 pcs)

#2 Small plate (4 pcs)



View of all six plates in place.

Optional: two additional plates may be ordered for the bottom of the cart.

TECHNICAL DATA

Large eutectic plate

PP plastic material
Eutectic solution.....: 2.7 liters / 91 floz
Quantity per cart: 2 pcs.
Unit Gross Weight: 3.65 kg / 8oz

Small eutectic plate

PP plastic material
Eutectic solution: 1.6 liters / 54 floz
Quantity per cart: 4 pcs.
Unit Gross Weight.....: 2.40 kg / 5.3oz

Solution in accordance with the requirements of environmental toxicity and the EPA - United States Environmental Protection Agency (EPA)

SECURITY MEASURES

Handle plates with care to prevent cracks and leaks. Replace if plates become dry and brittle. Do not allow handling by unauthorized persons or children.

If leaks occur:

Skin Contact: If irritation occurs, wash with running water.

Eye Contact: If irritation occurs, wash the affected part with running water for at least 15 minutes. If irritation persists, seek medical attention immediately.

If swallowed: Drink plenty of water and do not induce vomit. Seek medical help.

Aqueous solution of propylene glycol to 20% - low-toxicity **NONFLAMMABLE**

Tips for use and maintenance

- 1-** In a freezer or cold room, place the plates standing up, cap side up. Keep a small space between the plates allowing cold air to flow, resulting in more efficient freezing of plates.
- 2-** We recommend a replacement set of plates to insure continued use of cart in case of damage to any plate.
- 3-** Avoid dropping plates, which could result in breakage and leaks.
- 4-** Any time eutectic solution needs to be changed or supplemented, replace the plate's cap and rubber seal.

Images used for illustration purposes only
THE MANUFACTURER RESERVES THE RIGHT TO CHANGE
THIS PRODUCT AT ANY TIME WITHOUT NOTICE.